


## HOW TO RETUBE YOUR EARMOULD:


1. Pull the old tubing out the earmould. **Do not throw the old tubing away as you will need it later.**




2. Cut the last 2 inches of a prebent piece of tubing to a tapered end (if you have not been supplied with tapered tubing). Thread this through the earmould until it comes out the other end.

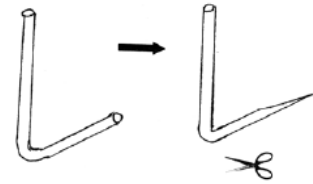


3. Pull the tubing through until the bend reaches the mould. All the tapered sections should have come through the other side.

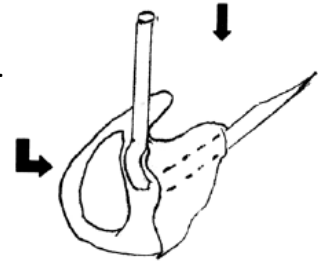

4. Cut the tapered tubing close as possible to the earmould. Any tube sticking out could rub the ear and make it sore.

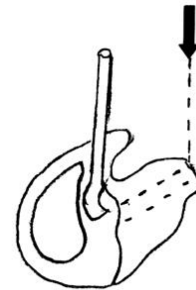

5. Take the old piece of tubing you saved and line it up with the newly threaded tube. Cut the end to the same length.  
OR measure the new tubing length on the ear.

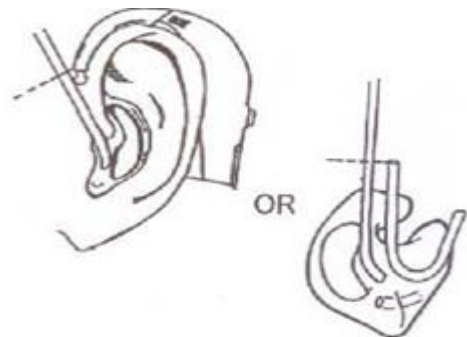

6. Squeeze the top of the tube and fit it over the end of the hearing aid hook. Make sure it bends in the right direction.

